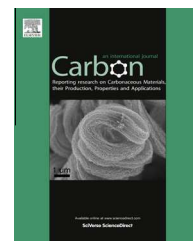


Available at www.sciencedirect.com

ScienceDirect

journal homepage: www.elsevier.com/locate/carbon

Chemical mechanical polishing of thin film diamond

Evan L.H. Thomas ^{a,*}, Geoffrey W. Nelson ^b, Soumen Mandal ^a, John S. Foord ^c
Oliver A. Williams ^{a,*}

^a School of Physics and Astronomy, Cardiff University, Cardiff CF24 3AA, UK

^b Department of Materials, Imperial College, London SW2 2BP, UK

^c Department of Chemistry, University of Oxford, Oxford OX1 3TA, UK

ARTICLE INFO

Article history:

Received 6 August 2013

Accepted 8 November 2013

Available online 16 November 2013

ABSTRACT

The demonstration that Nanocrystalline Diamond (NCD) can retain the superior Young's modulus (1100 GPa) of single crystal diamond twinned with its ability to be grown at low temperatures (<450 °C) has driven a revival into the growth and applications of NCD thin films. However, owing to the competitive growth of crystals the resulting film has a roughness that evolves with film thickness, preventing NCD films from reaching their full potential in devices where a smooth film is required. To reduce this roughness, films have been polished using Chemical Mechanical Polishing (CMP). A Logitech Tribo CMP tool equipped with a polyurethane/polyester polishing cloth and an alkaline colloidal silica polishing fluid has been used to polish NCD films. The resulting films have been characterised with Atomic Force Microscopy, Scanning Electron Microscopy and X-ray Photoelectron Spectroscopy. Root mean square roughness values have been reduced from 18.3 nm to 1.7 nm over 25 μm², with roughness values as low as 0.42 nm over ~0.25 μm². A polishing mechanism of wet oxidation of the surface, attachment of silica particles and subsequent shearing away of carbon has also been proposed.

© 2013 Elsevier Ltd. All rights reserved.

1. Introduction

The demonstration that Nanocrystalline Diamond (NCD) retains many of the superlative properties of single crystal diamond in a low cost, large area wafer scale package, as well as the possibility of CMOS integration due to the possibility of growth at low temperatures (<450 °C) has driven a resurgence in research into the use of thin diamond films [1,2]. With a high Young's modulus of 1100 GPa, the highest phase velocity of all materials of 12,000 m/s and thermal conductivity up to 2000 W/mK [3], applications include Micro-Electro-Mechanical Systems (MEMS), Surface Acoustic Wave (SAW) devices, thermal management and tribological coatings.

However, diamond does not grow epitaxially on silicon, requiring wafers to be seeded with nanodiamond particles prior to growth [4]. The subsequent competitive growth of these nanocrystals into coalesced NCD films results in a surface roughness that evolves with film thickness and exceeds that of cleaved single crystal diamond. The increased roughness of NCD films can be detrimental for many of its key applications, such as the integration of AlN as a piezoelectric in MEMS and SAW applications, decreased Q [5–7] – spoiling of MEMS devices, and enhanced friction in tribological coatings.

To work around this roughness, previous reports have used the nucleation side of freestanding NCD films, either locally removing the silicon substrate or bonding/glueing

* Corresponding authors: Fax: +44 29208 74056.

E-mail addresses: ThomasEL10@Cardiff.ac.uk, elthomas@gmail.com (E.L.H. Thomas), WilliamsO@Cardiff.ac.uk (O.A. Williams).

the wafer to another support and completely removing the silicon [8]. However, this process is complicated, time consuming and incompatible with some applications of NCD such as tribology and most MEMS structures. Therefore, there is a real need for a polishing step to produce low roughness NCD films.

Diamond polishing can be broadly split into two categories: contact and non-contact polishing [9,10]. Traditional mechanical polishing of diamond involves pressing a sample against a fast rotating iron scaife, >2500 rpm, in the presence of a diamond grit and binder. With applied carrier down forces greater than 10 N micro-cracking of the diamond occurs, with roughness values dependent on the grade of grit used [10,11]. However with this technique removal rates are generally low, ~10 nm/h, and the high forces on the sample can cause deep fissures and create surface pits [11]. To enhance the polishing rate and reduce surface damage the hybrid technique of Chemically Assisted Mechanical Polishing and Planarisation (CAMPP) was developed. With this technique an oxidiser, typically potassium nitrate or potassium hydroxide, heated to around 360 °C is added to the mechanical process [10,12]. After cracking by the scaife, the molten oxidisers enter and convert diamond to carbon dioxide and carbon monoxide weakening the surface and allowing further micro-cracking to occur. Through this technique faster removal rates and arithmetic roughness (R_a) values of 2.8 nm are achievable when used in conjunction with an initial mechanical polish [12]. Other chemical based techniques have replaced the metal scaife with a roughened glass plate and the diamond particles with slightly softer boron carbide grit [13]. However, while these techniques makes it possible to polish films of several tens of microns thickness, for films with thickness in the hundreds of nanometres the wafer bow can be significantly greater than the thickness of the film (typically > 10 μm over a 2-inch Si wafer), as shown schematically in Fig. 1. This will prevent uniform polishing across the entire film and possibly cause shattering due to the rigidity of the scaife. Therefore a more flexible polishing pad is required in order to conform to the bowed sample. One such method that is commonly used in the IC fabrication industry for the polishing of dielectric and metal interconnects is Chemical Mechanical Polishing (CMP). With this technique a softer polyester based polishing pad is used rather than a hard metal scaife with the aid of a colloidal silica (50–200 nm) [14] based polishing slurry at room temperatures. In conventional dielectric polishing Silicon Dioxide (SiO_2) is

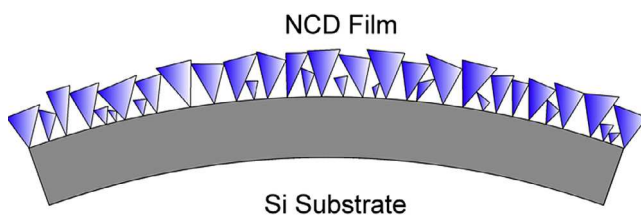


Fig. 1 – Schematic of exaggerated wafer bow seen with NCD films. Due to the differing coefficients of thermal expansion of diamond and silicon, upon cooling from growth temperatures significant bowing will occur. (A colour version of this figure can be viewed online.)

converted to bound silanol groups ($\text{Si}(\text{OH})_4$) by the liquid polishing fluid, silica particles in the slurry then bond to the surface of passivation layer [15]. The moving polishing pad, if sufficiently rough, will then create a force on the silica particle. As long as the energy from this shearing action is larger than the binding energy, the polishing pad then removes the particle and attached silanol molecule from the surface [16].

In this paper, CMP of NCD films is reported with the use of silica based polishing fluid and a polyester/polyurethane polishing pad at room temperature. It is important to note that no diamond-based products were used in either the pad or slurry, unlike previous studies [17,18] making post CMP removal of polishing materials simpler. Films have been studied with Scanning Electron Microscopy (SEM) to deduce morphology, Atomic Force Microscopy (AFM) to deduce roughness, and X-ray Photoelectron Spectroscopy (XPS) in an effort to explain the polishing mechanism.

2. Experimental procedure

Silicon (100) p-type 2-inch wafers of 500 μm thickness were used as substrates throughout. Before deposition all wafers were cleaned using the standard SC-1 process of 30% H_2O_2 : NH_4OH :DI H_2O (1:1:5) at 75 °C for 10 min. The substrates were then rinsed in DI H_2O in an ultrasonic bath for 10 min and spun dry. To seed, the wafers were placed in a mono-dispersed nanodiamond/ H_2O colloid and agitated in an ultrasonic bath for 10 min. This process is known to produce nucleation densities exceeding 10^{11} cm^{-2} [4]. Once seeded the wafers were rinsed, spun dry at 3000 rpm, and then immediately placed inside the CVD chamber.

Chemical Vapour Deposition (CVD) of Nanocrystalline Diamond was carried out in a Seki 6500 series Microwave Plasma Reactor under 3% CH_4/H_2 conditions at 40 Torr and 3.5 kW microwave power. Upon termination of growth all films were cooled down in hydrogen plasma to ensure hydrogen termination and prevent deposition of non- sp^3 material. Substrate temperatures were approximately 840 °C as determined by dual wavelength pyrometry, with heating solely from the microwave induced plasma. Films were grown to 360 nm determined *in situ* through the use of pyrometric interferometry, and *ex-situ* with a Filmetrics F-20 Spectral Reflectance system.

Chemical Mechanical Polishing was performed with a Logitech Tribo polishing system in conjunction with a SUBA-X polishing pad and Logitech supplied Syton SF-1 alkaline colloidal silica polishing slurry (15–50% SiO_2 , 9.2–10.1 pH, 4–5% ethylene glycol). Before use, the pad was conditioned for 30 min to ensure a high surface roughness to maximise polishing action and slurry distribution [19]. During polishing both pad and carrier were kept at 60 rpm rotating in opposite directions, while the carrier swept across the pad as shown schematically in Fig. 2. Down pressure was kept at 4 psi, while a backing pressure of 20 psi was used in an attempt to present a flat NCD film surface to the polishing pad. After initial wetting of the plate, the feed slurry rate was kept at 40 ml/min. Three films were polished for durations of 1, 2, and 4 h. After polishing the films were cleaned in an attempt to remove any remaining polishing slurry with a standard SC-1 clean as detailed previously.

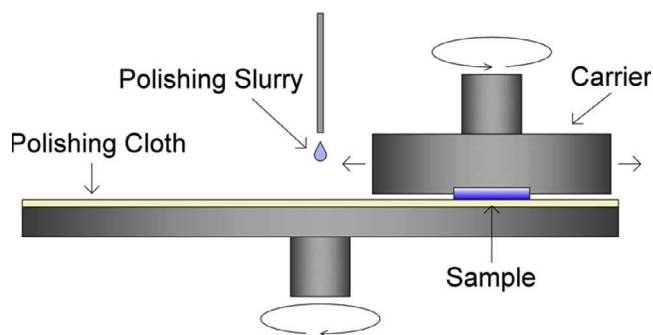


Fig. 2 – Schematic diagram of CMP tool. Sample held in rotating carrier and swept across counter rotating polishing cloth. Slurry distributed continually onto top of polishing cloth. (A colour version of this figure can be viewed online.)

SEM images were taken with the SE2 detector of a Raith e-line SEM, operated at 10 kV, 10 mm working distance and 20 k magnification. AFM was performed with a Veeco Dimension 3100 AFM operated in tapping mode and equipped with a TESPA tip of 320 kHz resonant frequency, 8 nm radius, and 42 N/m spring constant. 5 areas of $25 \mu\text{m}^2$ were taken around the centre of each sample, with post AFM analysis being carried out with Gwyddion SPM analysis software. Removal rates were calculated by comparing the average thickness of 13 points on each film before and after polishing with the Filmetrics F-20 system.

XPS experiments were conducted using a VG ESCA Lab XPS spectrometer at 1×10^{-9} Torr, using an Al $K\alpha$ radiation source (1486.3 eV) at 10 kV anode with 10 mA emission current. The Fixed Analyser Transmission (FAT) mode was used to obtain spectra, using a pass energy of 50 eV or 25 eV for survey and ‘narrow’ XPS scans, respectively. All peak fitting was done using XPS Peak Fit (v. 4.1) software. The reported binding energies have an error of ± 0.25 eV, based on the calibration to the C1s peak. Peak areas were normalised to the XPS cross-section of the F1s photoelectron signal by use of the atomic sensitivity factors [20]. Elemental ratios were calculated from the normalised peak areas and have an error of about 15–20% [21].

3. Results and discussion

3.1. Morphology

SEM images of the as grown and 1–4 h polished films are shown in Fig. 3. The as grown film of Fig. 3A shows clear faceting with crystal sizes of approximately 100–250 nm, as is typical for films grown under 3% methane admixture conditions [22]. When comparing the as grown film to the 1 h CMP film of Fig. 3B a clear polishing action can be seen. Peaks of the crystals that come into contact with the polishing pad are removed first, followed by a progression down to the point at which a neighbouring crystal is met for the 2 h and 4 h films of Fig. 3C and D. The resulting crystal plateaus appear very smooth with little evidence of cracking, suggesting a significant chemical action to the polishing. After 4 h of polishing it can be seen that the film appears close to optimum. With reference to Fig. 2 it can also be seen that a point has been reached at which the majority of crystal peaks

are removed, while there is also a lack of voids opening up to the substrate. Very little contamination from silica can also be seen on the SEM images, initially suggesting an SC-1 clean is enough to clear the surface of any loose polishing introduced contamination.

Fig. 4 shows the AFM images of the as grown and 1–4 h CMP films, while Table 1 shows the average roughness over the 5 scans of $25 \mu\text{m}^2$ for each film. As can be seen the micrographs reiterate this steady polishing, showing a decrease in roughness from the as grown 18.3 nm rms to 1.7 nm rms over the $25 \mu\text{m}^2$ scans. Also shown in blue on Fig. 4D is a smaller area of $\sim 0.25 \mu\text{m}^2$ showing that a local roughness of 0.42 nm rms is achievable with CMP and the parameters used. The removal rate is approximately 16 nm/h for the three polished films.

As attempts to use Raman and the surface enhanced technique of Shell Isolated Nanoparticle Enhanced Raman Spectroscopy (SHINERS) [23] were deemed inconclusive due to the swamping of the surface signal by the signal from the bulk, XPS has been used to deduce polishing mechanism.

3.2. X-ray photoelectron spectroscopy

XPS has been widely used to study CVD diamond films and previous studies are the basis for the present analysis [24,25]. Survey XPS spectra are shown in Fig. 5A, with major photoelectron and Auger peaks labelled. Unpolished and polished diamond films have significant C1s (≈ 285.0 eV) and O1s (≈ 531.0 eV) character. Photoelectron signal originating from F, S, Cl, and Si core levels are seen, particularly on polished diamond films. Clearly the chemical polishing process is introducing non-diamond contamination to the surface. However, this level of contamination is not sufficient enough to be detrimental to the use of NCD in MEMS devices and the applications mentioned earlier. It is also highly probable a hydrofluoric acid clean or that similar post CMP cleaning processes to the CMOS industry, such as hydrogen or oxygen plasma exposure, can be developed to remove this surface contamination.

The C1s region is typically used to characterise changes to the surface chemistry of diamond thin films. Representative C1s spectra are shown in Fig. 5B. The C1s spectra were deconvoluted into four chemical environments, as done for previous studies on CVD diamond thin films [24,25]: diamond (C–C, 285.0 eV), hydrocarbon (C–H, 285.5 eV), ether (C–O, 286.5 eV), and carbonyl (C=O, 287.5 eV). No evidence for the presence of a significant amount of a fifth form, carboxyl (C(=O)OH, 288.5 eV) was found. By comparing Fig. 5B(i) and 5B(ii), it can be seen that CMP does not significantly change the chemical termination of the CVD diamond surface, although it does lead to subtle changes in the concentrations of the differing carbon species. However the most important conclusion from the chemical analysis is that significant amounts of graphite or graphite related defects do not develop on the surface: it is well-known that treatments such as Ar ion bombardment [26] and electrochemical anodisation [27] produce an sp^2 type defect structure on the diamond interface, which is visible in XPS as a peak shifted by about 1 eV to a lower binding energy than that of the main diamond peak. It can be seen from Fig. 5B(ii) that such defects are not

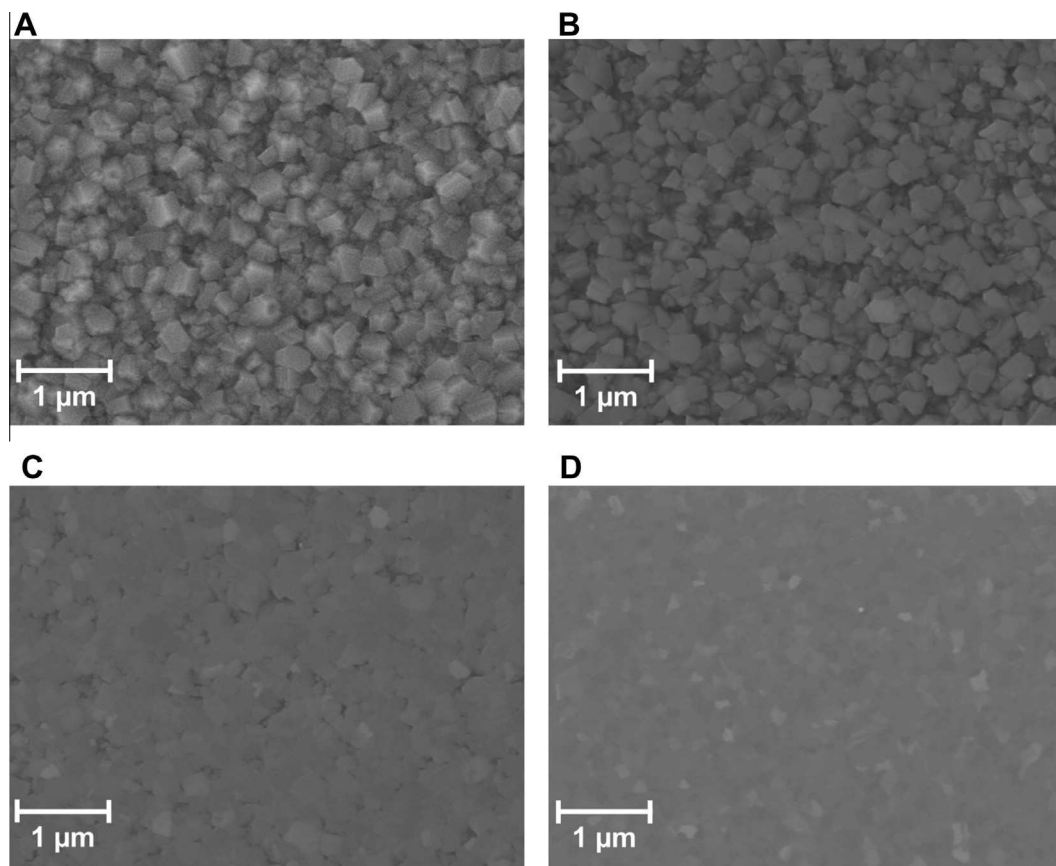


Fig. 3 – SEM micrographs of as grown and polished films. CMP was used on three different films for the indicated amount of time under identical conditions. (A) As grown, (B) 1 h CMP film, (C) 2 h, and (D) 4 h.

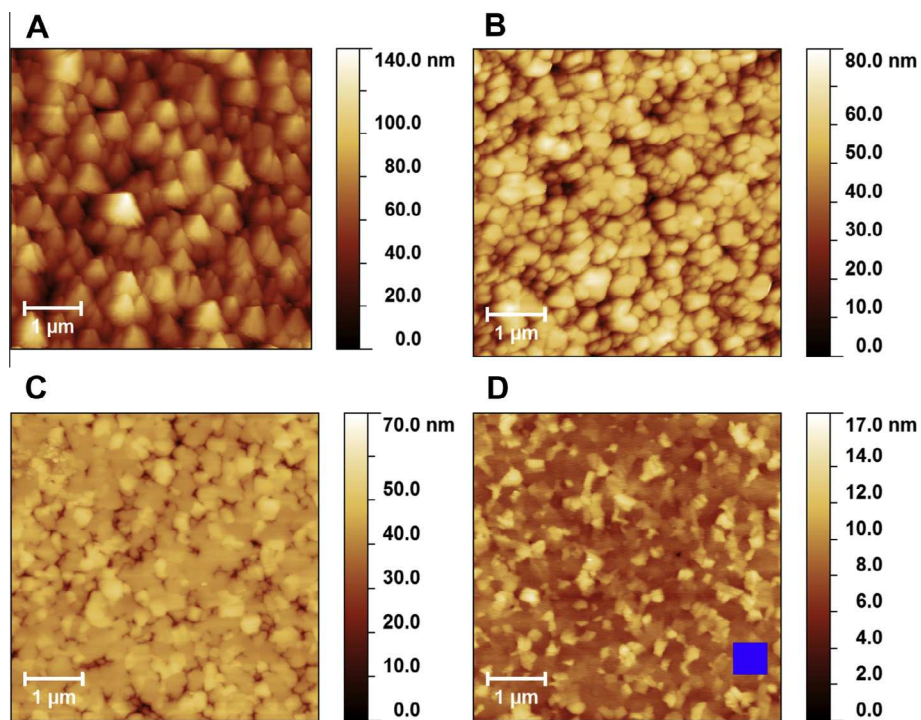


Fig. 4 – Corresponding AFM micrographs for as grown and polished films shown in Fig. 3. (A) As grown, (B) 1 h CMP film, (C) 2 h, and (D) 4 h. (A colour version of this figure can be viewed online.)

Table 1 – Roughness values over 25 μm^2 for the as grown and 1–4 h polished films.

Polishing duration (hrs.)	Roughness (nm rms)
0	18.3
1	11.0
2	4.5
4	1.7

Table 2 – Elemental ratios of O1s, F1s, and Si2s with respect to C1s as a function of polishing duration.

Polishing duration (hrs.)	O1s/C1s	F1s/C1s	Si2s/C1s
0	0.022	0.017	0.004
1	0.142	0.076	0.013
2	0.120	0.032	0.009
4	0.100	0.010	0.005

produced by the polishing procedure, again emphasising the gentle nature of CMP.

The polishing process permanently increases the oxygen character of the diamond surface. This is clearly demonstrated by the dramatic increase in the O1s/C1s ratio after 1 h of polishing (see Table 2). Given that the XPS sampling depth in diamond is probably up to 10 C layers, based on typical electron elastic mean free paths, O:C ratios of 0.1 signify at least monolayer coverage. Curiously however the level of C oxidation does not seem to be changed by this increase in oxygen. However noting the presence of the additional elements F, Cl, Si, and S, it is clear the associated molecular species could contain O, and of course adsorbed water could also be present. The trend in the O1s/Si2s ratio in Fig. 5C shows this increases with polishing time. This emphasises the point that the source of O in the XPS spectra is not limited to silica, but has a main component from other species. Overall the conclusion is that a range of molecular species which are fairly strongly bound (and therefore surviving the

cleaning of the samples before XPS analysis) do form on the surface being polished.

The F1s signal after 1 h of polishing was unexpected. After 4 h, this signal is reduced to near-negligible levels (see Table 1). The origin of this signal is likely the polymer-based pads used to polish the diamond substrates, surfactants in the chemical solution, or solvent residue. All of these sources could be additional sources of Cl, S, and O photoelectron signal.

3.3. Discussion

The SEM and AFM images of Fig. 4 and Fig. 5 show a steady polishing action with time. The polishing begins with the removal of peaks due to the contact with polishing pad, followed by a progression down to the intersection with neighbouring crystals. This initial polishing of high points with the smoothness and apparent crack free nature of crystal tops suggests a true chemical and mechanical synergy to the polishing. This steady polishing is reiterated by the AFM

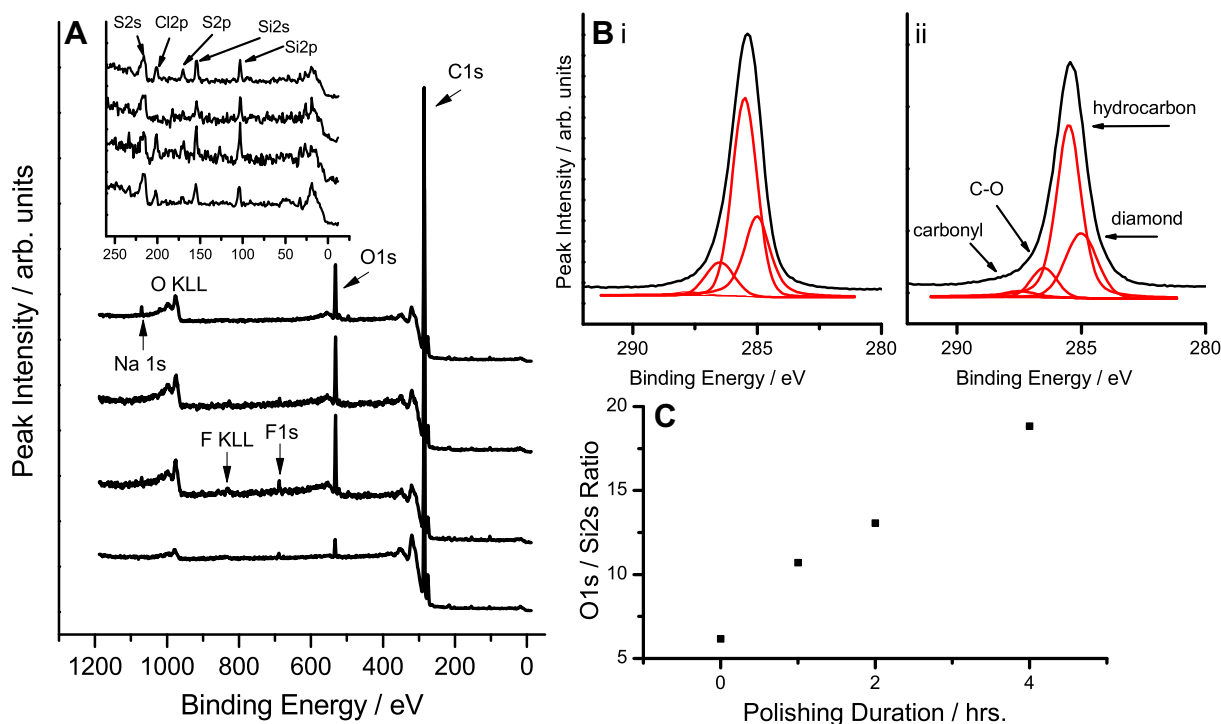


Fig. 5 – (A) Survey XPS spectra of diamond substrates with main photoelectron and Auger signals indicated. From top to bottom, the spectra represent as grown, 1 h CMP, 2 h, and 4 h respectively. The insert contains data from the main body of the figure, showing XPS features at low binding energy; (B) Representative C1s spectra before (i) and after 4 h (ii) of polishing. The experimental data (black) is shown above the curve-fits (red); (C) O1s/Si2s ratio plotted as a function of the polishing duration. (A colour version of this figure can be viewed online.)

with an as grown rms roughness of 18.3 nm being reduced to 1.7 nm after 4 h. It can also be seen that for a smaller area, closer to the size of an individual crystal, the roughness can be as low as 0.42 nm. The removal rate seen of approximately 16 nm/h exceeds that typically possible with traditional mechanical polishing [11], however this is heavily dependant on the age and condition of the pad. While this is less than the $\mu\text{m}/\text{h}$ polishing rates of CAMPP, films in the hundreds of nanometres with lower initial roughness can be polished without possible cracking.

With regards to mechanism, contact polishing can be broadly divided into three mechanisms: micro-chipping, conversion to graphite, and chemical reaction [10]. Due to the comparatively low hardness and flexibility of the polyester/polyurethane polishing cloth as well as the lack of any diamond based products in both the slurry and cloth, it is unlikely that micro-chipping is the cause of polishing. Coupled with the low temperatures and pressures used, and the fact that Ultrananocrystalline Diamond (UNCD), a material with a higher sp^2 content [1], burns at 600 °C [28] it is also unlikely that conversion to CO and CO₂ can be responsible with the polishing rates seen.

The lack of significant change in the graphitic content of the films as indicated by XPS indicates that conversion to graphite is not responsible for polishing. Typical techniques that rely on conversion to graphite utilise catalytic materials such as iron cobalt or nickel to lower the activation energy and operate at temperatures of approximately 750 °C [10], significantly higher than the 30–50 °C temperature of the waste slurry.

Therefore it is proposed that the polishing mechanism follows that of the CMP of Silicon Dioxide. In traditional CMP, hydroxide ions within the polishing fluid react with the surface siloxane (Si–O–Si) bonds, creating a silanol based passivation layer (Si(OH)₄) [15,16]. Silica particles within the polishing fluid will then attach themselves to the hydrated groups of the passivation layer. Should the polishing pad then be sufficiently rough, a shearing force will be created on the silica particles. If the energy from this shearing action is larger than the binding energy, the molecule will be removed resulting in polishing of the surface.

With diamond, XPS has shown that CMP leads to general oxidation of the interfacial region; increasing the carbonyl and hydroxyl content of the surface. Drawing parallels to the hydroxyl bonding seen in the polishing of SiO₂, we believe the OH termination facilitates the bonding of silica particles to the surface, as shown schematically in Fig. 6. As with SiO₂ CMP the rough pad surface will then create a shear force on the silica particle. Due to the bond strengths of Si–O, O–C and C–C being 800 kJ/mol, 1077 kJ/mol and 610 kJ/mol respectively [29], it is believed that when this force is applied the C–C bond will break, polishing the film surface. Alternatively an oxidised silica particle can directly attach itself without the need for intermediate wet chemical oxidation. As this is only a proposed model based on the mechanism on SiO₂, further work is needed for validation and optimisation of the CMP of diamond films.

Through the use of CMP it has been shown that bowed thin film diamond can be polished without fear of cracking of films. The technique removes the need for the use of

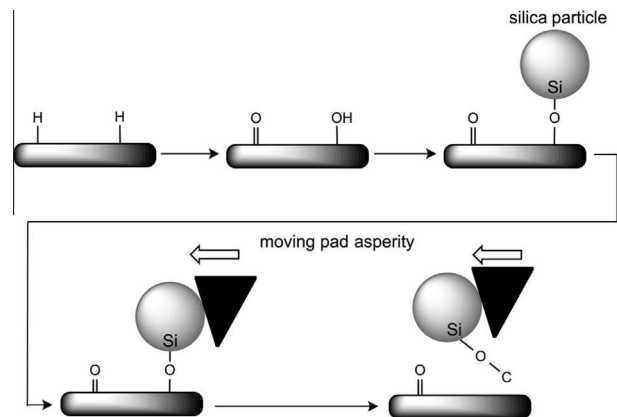


Fig. 6 – Proposed polishing mechanism. Wet oxidation of hydrogen terminated diamond by polishing fluid increases the carbonyl (C=O), and hydroxide (OH) content on the surface. As with the CMP of SiO₂, hydroxide ions facilitate attachment of silica particles to surface. Shearing forces generated on silica particle by asperities of the rough polishing pad then removes carbon atom from surface, providing polishing.

expensive diamond grit, or cast iron scafes and instead uses polyester/polyurethane polishing pads commonly found in the IC fabrication industry. As shown, considerable action can be seen without the need for raised temperatures or high pressures, simplifying the equipment required. Therefore CMP is a promising method of achieving low roughness diamond surfaces at low cost.

4. Conclusion

NCD films have been polished by CMP with the use of a polyurethane/polyester felt and an alkaline colloidal silica polishing fluid (Syton SF-1). No diamond based products were used in either the slurry or polishing cloth. A final rms roughness value of 1.7 nm was achieved over 25 μm^2 , with values as low as 0.42 nm over $\sim 0.25 \mu\text{m}^2$. The polishing mechanism proposed consists of the wet oxidation of the surfaces with the polishing fluid facilitating the attachment of silica particles to the diamond film, followed by the shearing away of the particle due to forces from the polishing pad. Thus with its low temperature, simple operation, ability to polish wafers with significant bow, and already common CMOS industry supplies, CMP is an attractive method for the polishing of thin film diamond.

Acknowledgments

The authors wish to acknowledge the financial support of the EPSRC under the grant ‘Nanocrystalline diamond for Micro-Electro-Mechanical-Systems’ reference number EP/J009814/1. OAW wishes to acknowledge the support of Marie Curie Actions for his intra-EU fellowship. The authors also wish to thank Sam Ladak at the Cardiff School of Physics and Astronomy for assistance with AFM, and Mark Kennedy and John McCrossan at Logitech for their help with the early CMP process.

REFERENCES

- [1] Williams OA. Nanocrystalline diamond. *Diam Relat Mater* 2011;20(5–6):621–40.
- [2] Butler JE, Sumant AV. The CVD of nanodiamond materials. *Chem Vap Deposition* 2008;14(7–8):145–60.
- [3] Philip J, Hess P, Feygelson T, Butler JE, Chattopadhyay S, Chen KH, et al. Elastic, mechanical, and thermal properties of nanocrystalline diamond films. *J Appl Phys* 2003;93(4):2164–71.
- [4] Williams OA, Douheret O, Daenen M, Haenen K, Osawa E, Takahashi M. Enhanced diamond nucleation on monodispersed nanocrystalline diamond. *Chem Phys Lett* 2007;445(4–6):255–8.
- [5] Palasantzas G. Random surface roughness influence on gas damped nanoresonators. *Appl Phys Lett* 2007;90(4).
- [6] Ergincan O, Palasantzas G, Kooi BJ. Influence of surface modification on the quality factor of microresonators. *Phys Rev B* 2012;85(20).
- [7] Imboden M, Mohanty P. Dissipation in nanoelectromechanical systems. *Phys Rep* 2013.
- [8] Rodriguez-Madrid JG, Iriarte GF, Williams OA, Calle F. High precision pressure sensors based on SAW devices in the GHz range. *Sens Actuators A-Phys* 2013;189:364–9.
- [9] Widiez J, Rabarot M, Saada S, Mazellier JP, Dechamp J, Delaye V, et al. Fabrication of silicon on diamond (SOD) substrates by either the bonded and etched-back SOI (BESOI) or the smart-cut (TM) technology. *Solid-State Electron* 2010;54(2):158–63.
- [10] Malshe AP, Park BS, Brown WD, Naseem HA. A review of techniques for polishing and planarizing chemically vapor-deposited (CVD) diamond films and substrates. *Diam Relat Mater* 1999;8(7):1198–213.
- [11] Schuelke T, Grotjohn TA. Diamond polishing. *Diam Relat Mater* 2013;32:17–26.
- [12] Ollison CD, Brown WD, Malshe AP, Naseem HA, Ang SS. A comparison of mechanical lapping versus chemical-assisted mechanical polishing and planarization of chemical vapor deposited (CVD) diamond. *Diam Relat Mater* 1999;8(6):1083–90.
- [13] Yuan Z, Jin Z, Zhang Y, Wen Q. Chemical mechanical polishing slurries for chemically vapor-deposited diamond films. *J Manuf Sci Eng* 2013;135(4):041006.
- [14] Zantye PB, Kumar A, Sikder AK. Chemical mechanical planarization for microelectronics applications. *Mater Sci Eng R Rep* 2004;45(3–6):89–220.
- [15] Krishnan M, Nalaskowski JW, Cook LM. Chemical mechanical planarization: slurry chemistry, materials, and mechanisms. *Chem Rev* 2010;110(1):178–204.
- [16] Hocheng H, Tsai HY, Su YT. Modeling and experimental analysis of the material removal rate in the chemical mechanical planarization of dielectric films and bare silicon wafers. *J Electrochem Soc* 2001;148(10):G581–6.
- [17] Hocheng H, Chen CC. Chemical-assisted mechanical polishing of diamond film on wafer. In: Jywe W, Chen CL, Fan KC, Fung RF, Hanson SG, Hsieh WH, et al., editors. *Progress on advanced manufacture for micro/nano technology 2005*, Pt 1 and 2. Trans Tech Publications; 2006. p. 1225–30.
- [18] Haisma J, Vanderkruis F, Spierings B, Oomen JM, Fey F. Damage-free tribochemical polishing of diamond at room-temperature – a finishing technology. *Precision Eng-J Am Soc Precision Eng* 1992;14(1):20–7.
- [19] McGrath J, Davis C. Polishing pad surface characterisation in chemical mechanical planarisation. *J Mater Process Technol* 2004;153:666–73.
- [20] Wagner CD, Davis LE, Zeller MV, Taylor JA, Raymond RH, Gale LH. Empirical atomic sensitivity factors for quantitative-analysis by electron-spectroscopy for chemical-analysis. *Surf Interface Anal* 1981;3(5):211–25.
- [21] Seah MP. Quantification of AES and XPS. In: Briggs Das MP, editor. *Practical surface analysis by auger and X-ray photoelectron spectroscopy*. Chichester, UK: John Wiley & Sons; 1983. p. 197–210.
- [22] Williams OA, Kriele A, Hees J, Wolfer M, Mueller-Sebert W, Nebel CE. High Young's modulus in ultra thin nanocrystalline diamond. *Chem Phys Lett* 2010;495(1–3):84–9.
- [23] Li JF, Huang YF, Ding Y, Yang ZL, Li SB, Zhou XS, et al. Shell-isolated nanoparticle-enhanced Raman spectroscopy. *Nature* 2010;464(7287):392–5.
- [24] Ferro S, Dal Colle M, De Battisti A. Chemical surface characterization of electrochemically and thermally oxidized boron-doped diamond film electrodes. *Carbon* 2005;43(6):1191–203.
- [25] Wilson JIB, Walton JS, Beamson G. Analysis of chemical vapour deposited diamond films by X-ray photoelectron spectroscopy. *J Electron Spectrosc Relat Phenom* 2001;121(1–3):183–201.
- [26] Lau WM, Huang LJ, Bello I, Yiu YM, Lee ST. Modification of surface band bending of diamond by low-energy argon and carbon ion-bombardment. *J Appl Phys* 1994;75(7):3385–91.
- [27] Foord J, Hu JP. Electrochemical oxidation and reduction processes at diamond electrodes of varying phase purity. *Phys Status Solidi A- Appl Mater Sci* 2006;203(12):3121–7.
- [28] Kim HJ, Moldovan N, Felts JR, Somnath S, Dai Z, Jacobs TDB, et al. Ultrananocrystalline diamond tip integrated onto a heated atomic force microscope cantilever. *Nanotechnology* 2012;23(49):495302.
- [29] Lide DR. *CRC handbook of chemistry and physics*. Boca Raton, FL: CRC Press; 2005.